



SRM Collar Removal Tool
P/N: SRM-9263-TOOL

Requires:
5/8" or equivalent Socket
Bench Vise

- 1) Insert aluminum removal tool into top of collar and a 5/8" Socket on bottom of collar
- 2) Use a vise to press collar out
- 3) Pull exposed collar out of bushings
- 4) Remove old bushings
- 5) Install new bushings using vise until fully seated
- 6) Press collar in from the bottom using vise until fully seated

