


isolate Vibration Reduce Arm Pump



Fully Adjustable - Offering Four Bar Positions

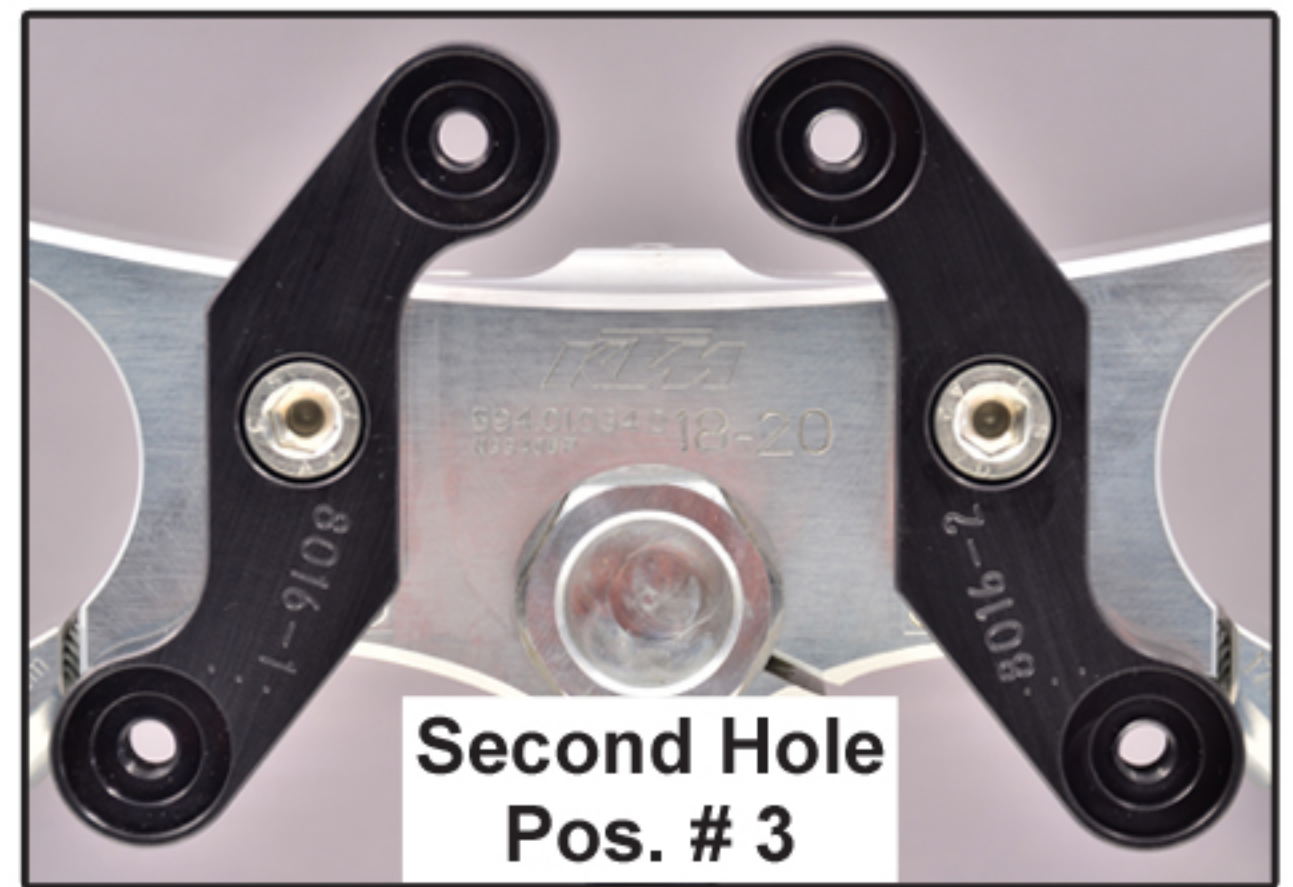

NOTE

P/N 8016-1 Will Always be on Left Side & 8016-2 Will Always be on Right Side





RUBBER DAMPENING SYSTEM

Installation Instructions

Note: All work should be done by a qualified professional mechanic.

1. Remove stock bar mounts.
2. Install 8016 Bases using M10 x 35 Allen bolts to desired mounting holes in stock triple clamp. (Refer to diagram on back side)
Use Blue Loc-Tite and torque bolts to 30-32 Ft./Lbs.
3. Mount 8001 Handlebar Perches to 8016 Base using M8 x 45 Hex Head bolts and washers.
Use Blue Loc-Tite and torque to 18-20 Ft./Lbs.
4. Re-install handle bars and install Top Bar Clamps using M8 x 35 Socket Head Allen bolts. Apply a small amount of grease to threads and torque to 24-26 Ft./Lbs.
5. Check function of all controls while bike is on the stand to ensure there is no cable binding.
6. Re-torque all bolts after initial ride to ensure proper torque specifications.
7. Routine inspection of all components should be performed to ensure proper function of all controls.

NOTE:

Some models may require spacing out the odometer to clear BRP Bar Mounts. Use (2) M6x30 Hex Bolts and Aluminum Spacers (supplied) to achieve proper clearance between bar mounts and odometer.

Kit Includes (2)
Sets of Bushings

(Red) Medium Bushings



(Blue) Soft Bushings

